

## **Instructions for Receiving LLBN, 3ABN, and Other Channels on New Satellite**

### **MANHATTAN DSR 1500**

1. Using your Manhattan remote control press “SETUP” button (located above the #3 button)
2. Press \*down arrow and highlight “SYSTEM SETTING”
3. Press OK button
4. Press \*down arrow and highlight “DEFAULT SETTING”
5. Press OK button and the screen will display “WARNING: THIS WILL RESET ALL SETTINGS TO DEFAULT VALUES”
6. Press \*right arrow to select “OK”
7. Press OK button and the screen will display “WARNING: ARE YOU SURE YOU WANT TO CONTINUE”
8. Press \*right arrow to select “OK”
9. Press OK button
10. Screen will Display “PLEASE WAIT” then “STORED SETTINGS RESET TO DEFAULT”, press OK button to restart the receiver.
11. Screen displays LANGUAGE SELECTION, press OK button.
12. Press \*down arrow to “TP FREQUENCY”
13. Using the number buttons on the remote control enter the numbers 11842
14. Press \*down arrow to select POLARIZATION should be “HOR”
15. Press \*down arrow to ‘SYMBOL RATE’
16. Using the number buttons on the remote control enter the numbers 22000

### **SEE “INSTRUCTIONS FOR MOVING THE DISH”**

### **IMPORTANT: DO NOT PROCEED TO NEXT STEP UNTIL READJUSTING THE DISH.**

17. When you have the maximum yellow/green bar on “Signal Strength”, press \*down arrow to “Start Search” (there will be quotation marks “” on either end of Start Search when it is selected)
18. Press the OK button
19. A box will pop up to the right. When you see the word “Store” at the bottom of that box press OK button
20. Screen will display “CHANNEL DATA IS BEING UPDATED” then return to a TV viewing screen.

**\*DIRECTIONAL ARROWS ON THE REMOTE CONTROLS ARE THE “CHANNEL UP BUTTON (UP ARROW), CHANNEL DOWN BUTTON (DOWN ARROW), VOLUME UP BUTTON (RIGHT ARROW), VOLUME DOWN BUTTON (LEFT ARROW)**

## **MANHATTAN SKYLINE 1000**

1. Using your Manhattan remote control press the “Menu” button
2. Press the \*down arrow to highlight “Master Reset”
3. Press the OK button two (2) times and the screen will display “Resetting - Please Wait”
4. Press ESC button to exit “OSD SETUP”
5. Press ESC button to exit “TV SETTINGS”
6. Press ESC button to exit “TIME SETTINGS” (or enter time settings and select STORE and press OK)
7. Press ESC button to exit “ANTENNA SETTINGS”
8. Press \*down arrow to highlight “Search Mode”
9. Press \*left arrow to select “Manual FTA”
10. Press the channel down button to highlight “TP DATA”
11. Press OK button
12. A box will pop up to the right. At the top of that box, in yellow, make sure it says “TP1:3ABN”, if not, push the \*left or right arrow to get to “TP1:3ABN”
13. Press \*down arrow to “FREQ” (frequency)
14. Using the number buttons on the remote control enter the numbers 11842
15. Press \*down arrow to “Polarity”
16. Press \*left arrow to select “HORZ.”
17. Press \*down arrow to “S/R” (symbol rate)
18. Using the number buttons on the remote control enter the numbers 22000
19. Press \*down arrow to “FEC”
20. Press \*left arrow to select  $\frac{3}{4}$
21. Press \*down arrow to “STORE”
22. Press OK button and screen will display “Storing Data – Please Wait”

### **SEE “INSTRUCTIONS FOR MOVING THE DISH”**

#### **IMPORTANT: DO NOT PROCEED TO NEXT STEP UNTIL READJUSTING THE DISH.**

23. When you have the maximum strength on the two green bars (both Signal and Quality) press \*down arrow to “START”
24. Press OK button and upon channel scan completion the screen will display “Resetting – Please Wait”
25. Press OK button to continue

**\*DIRECTIONAL ARROWS ON THE REMOTE CONTROLS ARE THE “CHANNEL UP BUTTON (UP ARROW), CHANNEL DOWN BUTTON (DOWN ARROW), VOLUME UP BUTTON (RIGHT ARROW), VOLUME DOWN BUTTON (LEFT ARROW)**

**TO DETERMINE WHICH TOPFIELD RECEIVER YOU HAVE TURN THE RECEIVER BOX OVER AND LOOK AT THE BOTTOM. THERE IS A STICKER ON THE BOTTOM THAT WILL SAY TF3000Fi, TF4000Fi OR TF6200F**

### **TOPFIELD 3000**

1. Using your Topfield remote control push "Menu" button
2. Press \*down arrow to highlight "Installation"
3. Press OK button
4. Press \*down arrow to select "Factory Setting"
5. Press OK button to display "Reset All Data"
6. Press \*left arrow to select "Yes"
7. Press OK button to display "Position Data Delete"
8. Press \*left arrow to select "Yes"
9. Press OK button to continue
10. Press \*up arrow to select "SAT/TP Edit"
11. Press OK button again on "Satellite Name" (A box with a list of satellite names will pop up on the right hand side)
12. Press \*down arrow to select "Telestar5(KU)" or "Intel\_Amc5(KU)"
13. Press OK button
14. Press \*down arrow to select "Add new TP"
15. Press OK button to display new window "Add New TP – "Frequency" will be highlighted in white.
16. Using the number buttons on the remote control enter the numbers 11842
17. Press \*down arrow to select "Symbol Rate"
18. With the number buttons on the remote control enter the numbers 22000
19. Press \*down arrow to select "Polarization" and push the \*right arrow one time and it should read "Horizontal"
20. Press \*down arrow to the word "OK" and press the OK button on the remote control.
21. Press \*down arrow to select "Channel Search" and press the OK button on the remote control.
22. In the lower right hand corner you will see two bars, one says "Level" and one says "Quality". You should have a green "Level" bar
23. Press \*down arrow to select "Search Mode" then press \*right arrow one time and it should read "Manual"

**SEE "INSTRUCTIONS FOR MOVING THE DISH"**

**IMPORTANT: DO NOT PROCEED TO NEXT STEP UNTIL READJUSTING THE DISH.**

24. Press \*down arrow to select "FTA/Scrambled" and press \*right arrow to read "FTA Only"
25. Make sure you have a yellow Quality bar then press \*down arrow to select "Start Search"
26. Press OK button and a "Searching" screen will appear.
27. When Channel Scan is completed press OK, the Channel Search Screen will appear.
28. Press EXIT button to exit and view programming.

**\*DIRECTIONAL ARROWS ON THE REMOTE CONTROLS ARE THE "CHANNEL UP BUTTON (UP ARROW), CHANNEL DOWN BUTTON (DOWN ARROW), VOLUME UP BUTTON (RIGHT ARROW), VOLUME DOWN BUTTON (LEFT ARROW)**

## **TOPFIELD 4000, 6200**

1. Using your Topfield remote control push “Menu” button
2. Press \*down arrow to highlight “Installation”
3. Press OK button
4. Press \*down arrow to select “Factory Setting”
5. Press OK button to display “Reset All Data”
6. Press \*left arrow to select “Yes”
7. Press OK button to display “Position Data Delete”
8. Press \*left arrow to select “Yes”
9. Press OK button to continue
10. Press \*up arrow to select “SAT/TP Edit”
11. Press OK button again on “Satellite Name” (A box with a list of satellite names will pop up on the right hand side)
12. Press \*down arrow to select “Intel\_Amer5(KU)”
13. Press OK button
14. Press \*down arrow to select “Add new TP”
15. Press OK button to display new window “Add New TP – “Frequency” will be highlighted in white.
16. Using the number buttons on the remote control enter the numbers 11842
17. Press \*down arrow to select “Symbol Rate”
18. With the number buttons on the remote control enter the numbers 22000
19. Press \*down arrow to select “Polarization” and push the \*right arrow one time and it should read “Horizontal”
20. Press \*down arrow to the word “OK” and press the OK button on the remote control.
21. Press \*down arrow to select “Service Search” and press the OK button on the remote control.
22. In the lower right hand corner you will see two bars, one says “Level” and one says “Quality”. You should have a green “Level” bar
23. Press \*down arrow to select “Search Mode” then press \*right arrow one time and it should read “Manual”

**SEE “INSTRUCTIONS FOR MOVING THE DISH”**

**IMPORTANT: DO NOT PROCEED TO NEXT STEP UNTIL READJUSTING THE DISH.**

24. Press \*down arrow to select “FTA/Scrambled” and press \*right arrow to read “FTA Only”
25. Press \*down arrow to select “Start Search”
26. Press OK button and a “Searching” screen will appear.
27. When Channel Scan is completed press OK, the Service Search Screen will appear.
28. Press EXIT button to exit and view programming.

**\*DIRECTIONAL ARROWS ON THE REMOTE CONTROLS ARE THE “CHANNEL UP BUTTON (UP ARROW), CHANNEL DOWN BUTTON (DOWN ARROW), VOLUME UP BUTTON (RIGHT ARROW), VOLUME DOWN BUTTON (LEFT ARROW)**

## INSTRUCTIONS FOR MOVING THE DISH

1. Go outside to the dish. Mark the current position of the dish on the mast pipe and the current elevation angle. Slightly loosen the bolts that secure the dish to the vertical mast pie, while standing behind the dish move the satellite dish lightly to the left (EAST). Have someone else inside looking at the TV screen. When you are on the G-19 satellite you will get two green bars, one on the signal and one on the “Quality” (on the Manhattan Skyline 1000), a yellow/green bar on the “Signal Strength” on the (Manhattan DSR 1500), on the Topfield receivers you will get a yellow bar on the “Quality” bar.



2. You may have to adjust the elevation to receive the new satellite. If you are in the central US or Canada, minimal or no elevation change will be necessary. If you are in the eastern part of the US or Canada, slightly raise the dish approximately 2 degrees. If you are in the western part of the US or Canada slightly lower the dish approximately 2 degrees. Slightly loosen the bolts that lock the elevation angle. Once the Quality bar/Signal Strength bar is at the highest reading, tighten the dish mounting and elevation.



3. Slightly loosen the screws of the clamp that holds the LNBF. Slowly rotate the LNBF clockwise or counter clockwise to peak the Quality/Signal Strength bar. If you or an installer need the exact aiming coordinates for the satellite, please visit the website [www.GeoSatFinder.com](http://www.GeoSatFinder.com) then enter your ZIP code and select your city

